

Operating Instructions

MODEL 1100

Installing the Blade (Fig. 1)

1. Loosen blade knob
2. Insert blade #324 from top and behind blade cover
3. Adjust top of blade to desired depth setting
4. Tighten blade knob

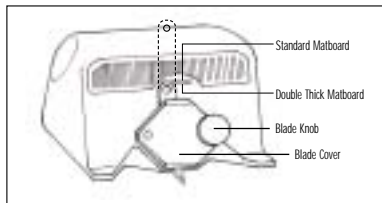


Fig. 1

Cutting a Mat

1. Using a ruler or T-square draw pencil lines on back of mat to the border width desired
2. Place a mat onto backing sheet
3. Align straight edge with pencil line (Fig. 2)
4. Place tip of blade 1/8" or 2mm behind the lower intersection of pencil line (Fig.3)
5. Hold straight edge firmly and push blade into the mat and against straight edge
6. Push cutter away holding straight edge firmly (Fig. 4)
7. Stop when the blade tip crosses upper intersection of pencil lines by 1/8" or 2mm (Fig. 3)
8. Remove the mat cutter, rotate mat 1/4 turn and repeat three more times to finish mat

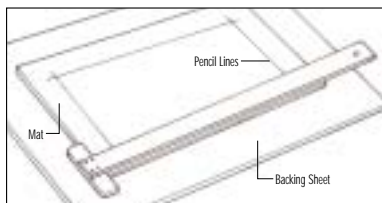


Fig. 2

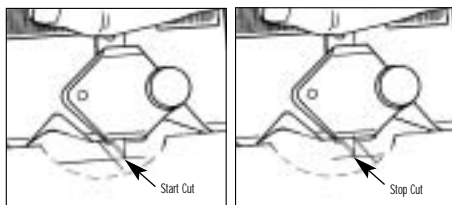


Fig. 3

Left handed Set-up

1. Remove blade holding knob
2. Using phillips screwdriver, remove the screws (Fig. 5)
3. Rotate blade cover 180°
4. Replace screw
5. Replace blade knob

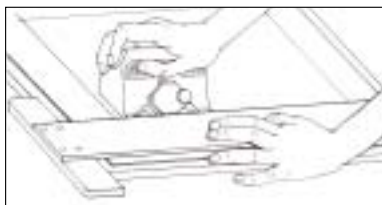


Fig. 4

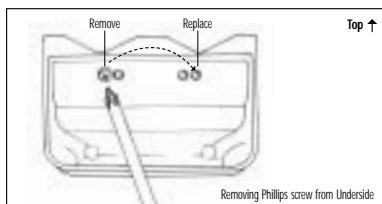


Fig. 5



Logan Graphic Products, Inc.
1100 Brown Street,
Wauconda, IL 60084
Toll Free 1 800 331 6232