Instruction Manual PICTURE FRAMING PROJOINER

Model F300-2




www.logangraphic.com

Description

The Pro Joiner Model F300-2 has been designed as a full featured manual joiner that is easy to use. Features include alignment pins which will correctly drive V-nails into all woods, fully adjustable press for variable moulding sizes and shapes, adjustable V-nail spacing allowing you to drive up to two V-nails at once, convenient V-nail spacing gauge to take the guess work out of placement, easy to load V-nail blocks that slide on a fixed rail and includes a quick set-up clamp to precisely secure moulding. Precise corner joints can be achieved with this heavy duty professional style joiner. Producing professional quality picture frames is now easier than ever.

Identification

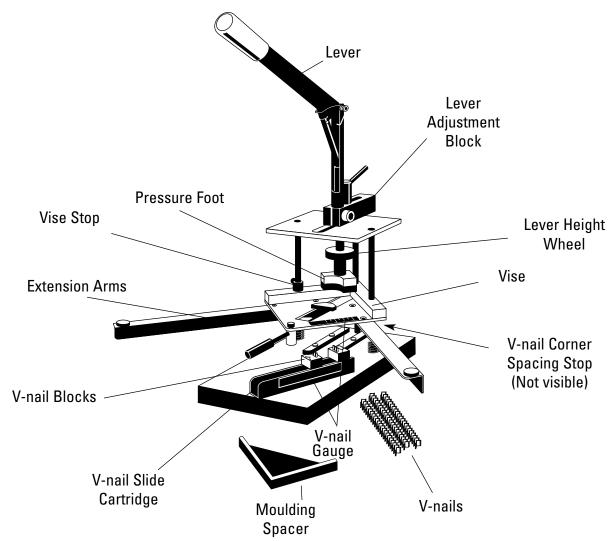

V-nails - Moulding fasteners.

Lever - Arbor press handle used to drive clamped moulding on to V-nails.

Lever Adjustment Block - Block which moves to locate pressure foot and adjust lever height.

Moulding Spacer - Helps in driving awkward profile mouldings onto V-nails.

Pressure Foot - Urethane coated foot which locates on moulding joint and drives wood onto nails.

V-nail Slide Cartridge - Allows V-nail blocks to be moved out for easy loading.


V-nail Blocks - Two blocks which hold V-nails.

V-nail Gauge - Allows for "no guessing" set-up of nail spacing.

Vise - Quick set jaw locks moulding in place. Clamp moves up and down to drive wood onto nails.



Parts List

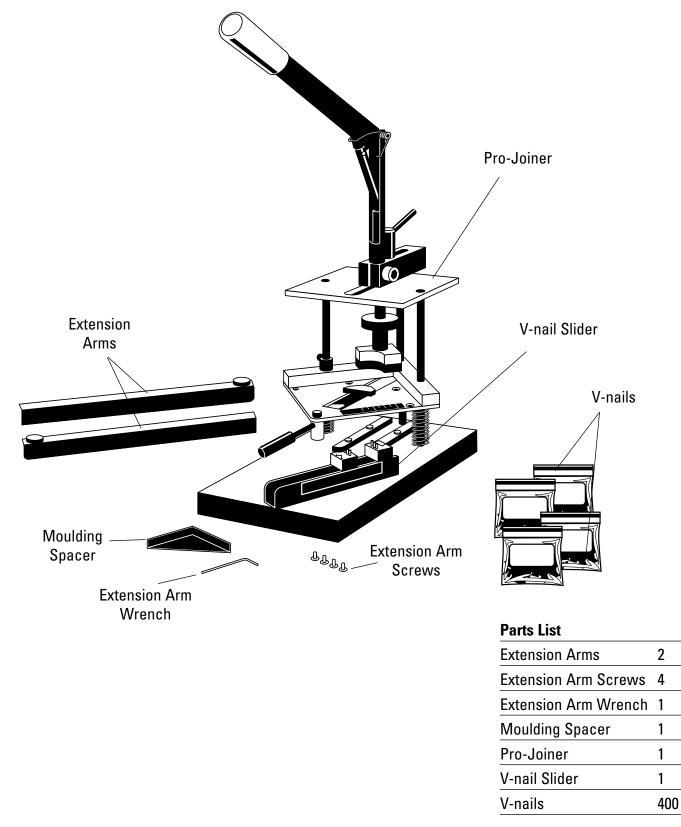



Model F300-2

Assembly Procedure

A. Extension Arms

- 1. Align set of holes in arm with holes in vise, making sure the rubber bumper faces up. (Fig. 1).
- 2. Attach arm to vise with extension arm screws using extension wrench supplied.

Preparation

A. Clamp Moulding



Mark edges of mitre to blend any gaps in joint (Fig. 2). Use wood stain marker available at hardware store.




Glue moulding mitre for long lasting solid corners (Fig. 3).



Always start by placing longer length in vise on right hand side and shorter length on left hand side. This will give you two halves of frame, eliminating errors (Fig. 4).

- 1. Remove V-nail slider.
- 2. Press vise down and tighten vise stop to provide clearance for moulding.
- **3.** Adjust clamp jaw by pressing spring button and sliding handle (Fig. 5).
- 4. Align moulding pieces in vise so top corner is square (Fig. 6).
- 5. Tighten handle only as much as necessary to hold joint together.
- 6. Release vise stop.

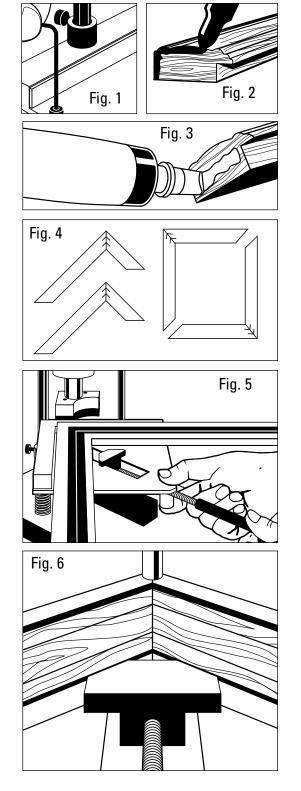



Preparation continued

 
B. Set V-nail Spacing

- 1. Read dimension from vise scale (Fig. 7).
- Adjust <u>V-nail block</u> in <u>slider</u> to same dimension as <u>vise</u> <u>scale</u>. <u>V-nails</u> are now set approximately 1/4 inch from each end of joint (Fig. 8).


3. Replace slider.


V-nail Corner Spacing Stop


- Locate <u>slider</u> against the stop by pushing it back as far as it will go.
- This stop changes the distance the top V-nail is located from the end of the joint (Dimension X) (Fig. 9).



- Only one <u>V-nail block</u> is moveable and it is designed to be removed from the <u>slider</u>.
- When small mouldings need to be joined. Simply remove the <u>stop knob</u> from end of <u>slider</u> and slide <u>V-nail block</u> out. It cannot be left in <u>slider</u> or damage may occur.
- This now allows you to drive two V-nails (one at a time in different places) to have a secure joint.

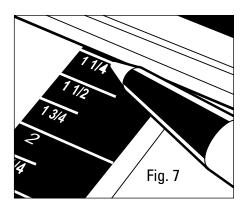

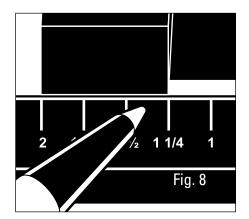

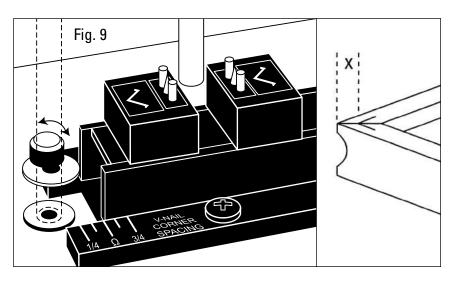



Model F300-2

Preparation continued

C. Set Pressure Foot Over Moulding

- 1. Loosen lever adjustment block handle.
- 2. Adjust <u>lever adjustment block</u> so <u>pressure foot</u> locates over middle moulding or where even downward pressure can be applied (Fig. 10).
- 3. Tighten lever.
- 4. Due to the many moulding profiles we have included a black moulding spacer. This is especially useful when the outside edge of moulding is considerably thinner than inside (rabbet) edge of moulding. This should help eliminate the joint from opening (Fig. 11)

One nail - the foot should be directly over the nail.

Two nails - the foot should be between the nails.

D. Adjust Foot Height

- With moulding now securely clamped, push the <u>vise</u> down until moulding bottoms out onto <u>V-nail blocks</u> and tighten <u>vise stop</u>.
- 2. Lower lever handle below horizontal.
- **3.** Adjust <u>pressure foot</u> by turning wheel until it contacts moulding and handle is below horizontal (Fig. 12).
- 4. Release vise stop.

E. V-nail Type


- 1. Hardwood nails are used for very hard woods like oak and maple. Do not use these nails on softwoods.
- 2. Softwood nails are used for other woods but can be used on hardwoods. Test them on hardwoods. If they do not work, use a hardwood nail.

F. V-nail Size

1. As a general rule, nail should be at least 1/2 of moulding thickness.

G. V-nail Quantity

1. 2 V-nails - from 0" to 2" (5cm) 3 V-nails - from 2" (5cm) to 3" (7cm)

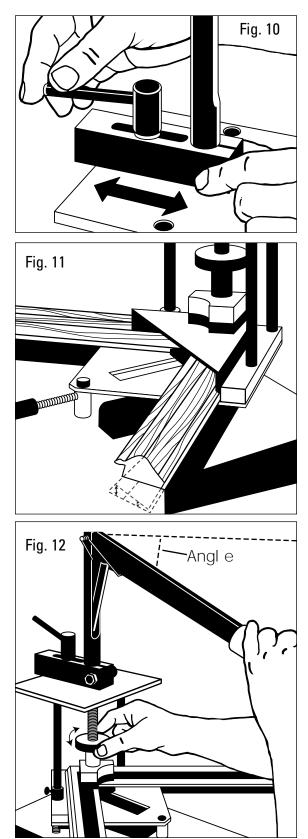



Instruction Manual

Model F300-2

Operation

A. Load V-nails

- **1.** Remove <u>slider</u> from base board (Fig. 13).
- **2.** Decide to drive one or two V-nails. With some hardwoods (walnut, etc) it may be easier to press only one V-nail in at a time.
- **3.** Insert V-nail with *sharp edge* up onto pins oriented the same as the sticker on the V-nail blocks (Fig. 14).
- Replace <u>slider</u> between guides on <u>baseboard</u> up against <u>corner</u> <u>stop</u> (Fig. 15).

For information on how to purchase additional V-nails see page 10.

B. Press Nails

- **1.** Lower <u>lever</u> and <u>pressure foot</u> onto moulding.
- 2. Press <u>lever</u> completely until <u>vise clamp</u> bottoms on <u>V-nail blocks</u> (Fig. 16).

Making a quick firm pull on the lever drives the V-nails faster and more accurately.

- 3. Raise lever.
- 4. Remove <u>V-nail slider</u>.
- 5. Remove jointed moulding corner.
- 6. Repeat process of clamping a new corner of moulding and loading V-nails.


C. Stacking V-Nails


It is possible to drive V-Nails directly behind the first V-Nail (stacking). This is to make possible, solid corners in extra thick moulding 1 1/2" or more. Care should be taken and it is advisable to practice with scrap moulding first.


- **1.** To start this procedure, press one V-Nail at a time.
- 2. Without moving the V-Nail block from its position in the V-Nail slider, place another V-Nail on the block and replace the slider to its original position.
- 3. Press the V-Nail in using slow but firm action.


Note: With some very hard woods, it may be necessary to place the second V-Nail on the V-Nail block upside down. This is to ensure maximum contact with the first V-Nail and the second one being pushed in underneath the first. It may also not be possible to drive it all the way flush with the moulding, depending on wood used, in which case, it may be necessary to sand or file the V-Nail until it is flush with mould-ing. This should not be done until all 4 corners have been joined.

4. Repeat the process until the corner has been completely joined and then repeat with the remaining three corners.

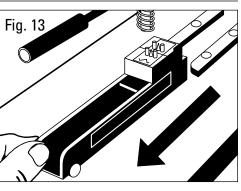

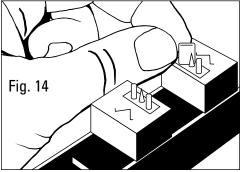

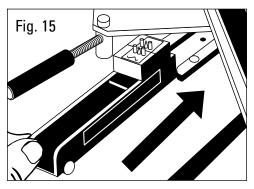

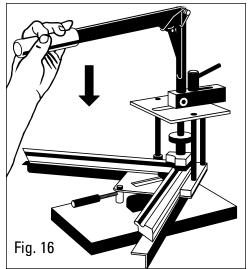



Trouble Shooting


Problem	Solution
Gaps in joints.	Sand Mitres smooth.
	Make sure the two pairs are equal length.
	Reduce the amount of glue in joint.
	Check square cutting action of saw.
	Use longer V-nails if possible.
V-nails don't drive in all the way in.	Try using one (1) V-nail at a time, especially when joining hard woods.
	Remove any obstruction under vise.
	Re-adjust the depth of the lever arm.
V-nail holders won't emerge from V-nail blocks.	Soak in solvent to clear away glue or dust. Place a finger under V-nail block between block and slider to push V-nail holder up.
Moulding joints open up when pressing V-nails in.	Re-adjust the placement of the pressure foot to spread the load more evenly.
	Use one V-nail at a time when foot contacts awkward sloping profile moulding.

Warranty


Logan Graphic Products, Inc. ("Logan") warrants the Pro Joiner - Model F300-2, to be free from defects in parts and workmanship for a period of one year from the date of original purchase. Logan warrants that it will either repair or replace, at it's sole discretion, any necessary replacement parts found to be defective. Should the product need to be returned to Logan for repair or replacement parts, authorization for any return must come from Logan in writing. Costs of returning the product to Logan, including insurances, shall be borne by the purchaser. Logan shall not be liable for any damages or losses, incidental or consequential, direct or indirect, arising from the use of this product. This warranty extends only to the original purchaser and is not assignable or transferable. This warranty is in lieu of all other warranties, expressed or implied.



Model F300-2

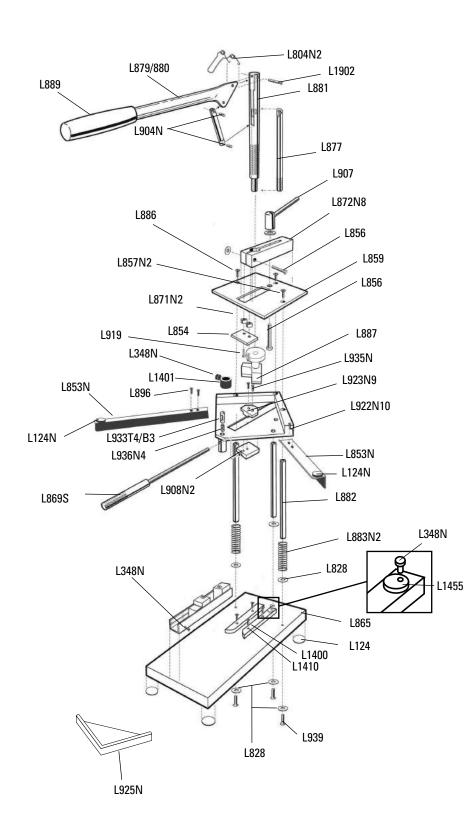


L124 Feet 4 L124N Ext. Arm Bumper 2 L348N Knob Screw 3 L804N2 Handle Spring 1 L828 Post Washer 6 L853N Ext. Arms 2 L854 Block Plate 1 L856 Handle Bolt 1 L857N2 Top Plate Screw 2 L859 Top Plate Screw 2 L859 Top Plate Screw 2 L865 Base Board 1 L869 Clamp Handle 1 L869 Rod and Handle 1 L871N2 Block Spacer 2 L872N8 Lever Adjustment Block 1 L877 Lever Shaft 1 L889 Handle Grip 1 L889 Handle Grip 1 L882 Post Spring 2 L883 Post Spring 2 L886 Top Post Screw 1 L890 Link P	No.	Description	Qty.
L348N Knob Screw 3 L804N2 Handle Spring 1 L828 Post Washer 6 L853N Ext. Arms 2 L854 Block Plate 1 L856 Handle Bolt 1 L857 Top Plate Screw 2 L859 Top Plate Screw 2 L859 Top Plate Screw 2 L865 Base Board 1 L869 Clamp Handle 1 L869 Clamp Handle 1 L869 Rod and Handle 1 L872N8 Lever Adjustment Block 1 L877 Lever Shaft 1 L879/880 Handle 1 L889 Handle Grip 1 L882 Post 3 L882 Post Screw 1 L882 Post Screw 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L896 Ext. Arm Screws </td <td>L124</td> <td>Feet</td> <td>4</td>	L124	Feet	4
L804N2 Handle Spring 1 L828 Post Washer 6 L853N Ext. Arms 2 L854 Block Plate 1 L856 Handle Bolt 1 L857N2 Top Plate Screw 2 L859 Top Plate Screw 2 L859 Top Plate Screw 2 L865 Base Board 1 L869 Clamp Handle 1 L869 Rod and Handle 1 L869 Rod and Handle 1 L877N2 Block Spacer 2 L872N8 Lever Adjustment Block 1 L877 Lever Shaft 1 L877 Lever Tube 1 L880 Handle Grip 1 L882 Post 3 L883N2 Post Spring 2 L886 Top Post Screw 1 L896 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Lin	L124N	Ext. Arm Bumper	2
Latence of program Latence of program L828 Post Washer 6 L853N Ext. Arms 2 L854 Block Plate 1 L856 Handle Bolt 1 L857 Top Plate Screw 2 L859 Top Plate Screw 2 L859 Top Plate 1 L865 Base Board 1 L869 Clamp Handle 1 L869 Rod and Handle 1 L869 Rod and Handle 1 L872N8 Lever Adjustment Block 1 L877 Lever Shaft 1 L877 Lever Shaft 1 L879/880 Handle Grip 1 L889 Handle Grip 1 L882 Post 3 L882 Post Spring 2 L886 Top Post Screw 1 L896 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 <td>L348N</td> <td>Knob Screw</td> <td>3</td>	L348N	Knob Screw	3
L853N Ext. Arms 2 L854 Block Plate 1 L856 Handle Bolt 1 L856 Handle Bolt 1 L859 Top Plate Screw 2 L859 Rod Plate 1 L865 Base Board 1 L869 Clamp Handle 1 L869 Rod and Handle 1 L872N8 Lever Adjustment Block 1 L877 Lever Shaft 1 L879/880 Handle Grip 1 L889 Handle Grip 1 L881 Lever Tube 1 L882 Post 3 L883N2 Post Screw 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L902 Link Pin 1 1 L902 Link Pin 2 <td>L804N2</td> <td>Handle Spring</td> <td>1</td>	L804N2	Handle Spring	1
L854 Block Plate 1 L856 Handle Bolt 1 L856 Handle Bolt 1 L857N2 Top Plate Screw 2 L859 Top Plate 1 L865 Base Board 1 L869 Clamp Handle 1 L869 Clamp Handle 1 L869 Rod and Handle 1 L869 Rod and Handle 1 L871N2 Block Spacer 2 L872N8 Lever Adjustment Block 1 L877 Lever Shaft 1 L877 Lever Shaft 1 L889 Handle Grip 1 L882 Post 3 L882 Post Spring 2 L886 Top Post Screw 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L896 Ext. Arm Screws 4 L902 Link Pin 2 2 L904N Link Pin 2 </td <td>L828</td> <td>Post Washer</td> <td>6</td>	L828	Post Washer	6
Lass Handle Bolt 1 L856 Handle Bolt 1 L857N2 Top Plate Screw 2 L859 Top Plate 1 L865 Base Board 1 L869 Clamp Handle 1 L869 Rod and Handle 1 L869 Rod and Handle 1 L869 Rod and Handle 1 L871N2 Block Spacer 2 L872N8 Lever Adjustment Block 1 L877 Lever Shaft 1 L879/880 Handle 1 L889 Handle Grip 1 L882 Post 3 L882 Post Spring 2 L886 Top Post Screw 1 L896 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw	L853N	Ext. Arms	2
L857N2 Top Plate Screw 2 L859 Top Plate 1 L865 Base Board 1 L869 Clamp Handle 1 L869 Clamp Handle 1 L869 Rod and Handle 1 L869 Rod and Handle 1 L871N2 Block Spacer 2 L872N8 Lever Adjustment Block 1 L877 Lever Shaft 1 L879/880 Handle 1 L889 Handle Grip 1 L881 Lever Tube 1 L882 Post 3 L883 Post Spring 2 L886 Top Post Screw 1 L887 Pressure Foot 1 L886 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw	L854	Block Plate	1
L859Top Plate1L859Top Plate1L865Base Board1L869Clamp Handle1L869-SRod and Handle1L871N2Block Spacer2L872N8Lever Adjustment Block1L877Lever Shaft1L877Lever Shaft1L889Handle Grip1L889Handle Grip1L882Post3L883N2Post Spring2L886Top Post Screw1L887Pressure Foot1L896Ext. Arm Screws4L902Link Pin 11L904NLink Pin 22L907Handle2L908N2Jaw Block1L919Block Screw2L92N10Clamp Base1L925NFramer Spacer1L935NJaw Screw2L936N4Button Spring1L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L856	Handle Bolt	1
L865 Base Board 1 L869 Clamp Handle 1 L869 Clamp Handle 1 L869 Rod and Handle 1 L871N2 Block Spacer 2 L872N8 Lever Adjustment Block 1 L877 Lever Shaft 1 L877 Lever Shaft 1 L879/880 Handle 1 L889 Handle Grip 1 L889 Handle Grip 1 L881 Lever Tube 1 L882 Post 3 L883N2 Post Spring 2 L886 Top Post Screw 1 L887 Pressure Foot 1 L896 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw 2 </td <td>L857N2</td> <td>Top Plate Screw</td> <td>2</td>	L857N2	Top Plate Screw	2
L869 Clamp Handle 1 L869-S Rod and Handle 1 L871N2 Block Spacer 2 L871N2 Block Spacer 2 L872N8 Lever Adjustment Block 1 L877 Lever Shaft 1 L879/880 Handle 1 L889 Handle Grip 1 L889 Handle Grip 1 L882 Post 3 L882 Post Spring 2 L886 Top Post Screw 1 L887 Pressure Foot 1 L886 Top Post Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw 2 L922N10 Clamp Base 1 L923N9 Clamp Jaw 1 L935N Jaw Screw 2 L936N4 Button Spring 1<	L859	Top Plate	1
L869-S Rod and Handle 1 L871N2 Block Spacer 2 L871N2 Block Spacer 2 L871N2 Lever Adjustment Block 1 L877 Lever Shaft 1 L877 Lever Shaft 1 L877 Lever Shaft 1 L879/880 Handle 1 L889 Handle Grip 1 L889 Handle Grip 1 L881 Lever Tube 1 L882 Post 3 L883N2 Post Spring 2 L886 Top Post Screw 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L902 Link Pin 1 1 L902 Link Pin 2 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw 2 L922N10 Clamp Base 1 L923N9 Clamp Jaw	L865	Base Board	1
L871N2 Block Spacer 2 L872N8 Lever Adjustment Block 1 L877 Lever Shaft 1 L877 Lever Shaft 1 L879/880 Handle 1 L889 Handle Grip 1 L889 Handle Grip 1 L889 Handle Grip 1 L881 Lever Tube 1 L882 Post 3 L883N2 Post Spring 2 L886 Top Post Screw 1 L887 Pressure Foot 1 L896 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw 2 L922N10 Clamp Base 1 L933T4/B3 Button 1 L935N Jaw Screw 2	L869	Clamp Handle	1
L872N8 Lever Adjustment Block 1 L877 Lever Shaft 1 L877 Lever Shaft 1 L877 Lever Shaft 1 L879/880 Handle 1 L889 Handle Grip 1 L889 Handle Grip 1 L889 Handle Grip 1 L881 Lever Tube 1 L882 Post 3 L883N2 Post Spring 2 L886 Top Post Screw 1 L887 Pressure Foot 1 L896 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw 2 L922N10 Clamp Base 1 L923N9 Clamp Jaw 1 L935N Jaw Screw 2 L936N4 Button Spring	L869-S	Rod and Handle	1
L877 Lever Shaft 1 L879/880 Handle 1 L889 Handle Grip 1 L889 Handle Grip 1 L881 Lever Tube 1 L882 Post 3 L883N2 Post Spring 2 L886 Top Post Screw 1 L887 Pressure Foot 1 L886 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw 2 L922N10 Clamp Base 1 L923N9 Clamp Jaw 1 L925N Framer Spacer 1 L935N Jaw Screw 2 L936N4 Button Spring 1 L939 Bottom Post Screw 3 L1401 Vise Stop 1 L1400 Slider Guides 2<	L871N2	Block Spacer	2
L879/880 Handle 1 L889 Handle Grip 1 L889 Handle Grip 1 L881 Lever Tube 1 L882 Post 3 L883N2 Post Spring 2 L886 Top Post Screw 1 L887 Pressure Foot 1 L896 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw 2 L922N10 Clamp Base 1 L923N9 Clamp Jaw 1 L925N Framer Spacer 1 L935N Jaw Screw 2 L936N4 Button Spring 1 L939 Bottom Post Screw 3 L1401 Vise Stop 1 L1400 Slider Guides 2	L872N8	Lever Adjustment Block	1
L889 Handle Grip 1 L881 Lever Tube 1 L881 Lever Tube 1 L881 Lever Tube 1 L882 Post 3 L883N2 Post Spring 2 L886 Top Post Screw 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L886 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw 2 L922N10 Clamp Base 1 L923N9 Clamp Jaw 1 L925N Framer Spacer 1 L933T4/B3 Button 1 L936N4 Button Spring 1 L939 Bottom Post Screw 3 L1401 Vise Stop 1	L877	Lever Shaft	1
L881 Lever Tube 1 L882 Post 3 L883N2 Post Spring 2 L886 Top Post Screw 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L896 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw 2 L922N10 Clamp Base 1 L923N9 Clamp Jaw 1 L925N Framer Spacer 1 L935N Jaw Screw 2 L936N4 Button Spring 1 L939 Bottom Post Screw 3 L1401 Vise Stop 1 L1400 Slider Guides 2 L1410 Slider Guide Screws <td>L879/880</td> <td>Handle</td> <td>1</td>	L879/880	Handle	1
L882 Post 3 L883N2 Post Spring 2 L886 Top Post Screw 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L896 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw 2 L922N10 Clamp Base 1 L923N9 Clamp Jaw 1 L925N Framer Spacer 1 L935N Jaw Screw 2 L936N4 Button Spring 1 L939 Bottom Post Screw 3 L1401 Vise Stop 1 L1400 Slider Guides 2 L1410 Slider Guide Screws 4	L889	Handle Grip	1
L883N2 Post Spring 2 L886 Top Post Screw 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L887 Pressure Foot 1 L896 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw 2 L922N10 Clamp Base 1 L923N9 Clamp Jaw 1 L925N Framer Spacer 1 L933T4/B3 Button 1 L935N Jaw Screw 2 L936N4 Button Spring 1 L939 Bottom Post Screw 3 L1401 Vise Stop 1 L1400 Slider Guides 2 L1410 Slider Guide Screws<	L881	Lever Tube	1
L886Top Post Screw1L887Pressure Foot1L887Pressure Foot1L896Ext. Arm Screws4L902Link Pin 11L904NLink Pin 22L907Handle2L908N2Jaw Block1L919Block Screw2L922N10Clamp Base1L925NFramer Spacer1L933T4/B3Button1L939Jaw Screw2L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L882	Post	3
L887 Pressure Foot 1 L896 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw 2 L922N10 Clamp Base 1 L923N9 Clamp Jaw 1 L935N Framer Spacer 1 L935N Jaw Screw 2 L936N4 Button 1 L939 Bottom Post Screw 3 L1401 Vise Stop 1 L1400 Slider Guides 2 L1410 Slider Guide Screws 4	L883N2	Post Spring	2
L896 Ext. Arm Screws 4 L902 Link Pin 1 1 L904N Link Pin 2 2 L907 Handle 2 L907 Handle 2 L907 Handle 2 L908N2 Jaw Block 1 L919 Block Screw 2 L922N10 Clamp Base 1 L923N9 Clamp Jaw 1 L925N Framer Spacer 1 L933T4/B3 Button 1 L935N Jaw Screw 2 L936N4 Button Spring 1 L939 Bottom Post Screw 3 L1401 Vise Stop 1 L1400 Slider Guides 2 L1410 Slider Guide Screws 4	L886	Top Post Screw	1
L902Link Pin 11L904NLink Pin 22L907Handle2L908N2Jaw Block1L919Block Screw2L922N10Clamp Base1L923N9Clamp Jaw1L925NFramer Spacer1L933T4/B3Button1L939Bottom Post Screw2L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L887	Pressure Foot	1
L904NLink Pin 22L907Handle2L907Handle2L908N2Jaw Block1L919Block Screw2L922N10Clamp Base1L923N9Clamp Jaw1L925NFramer Spacer1L935NJaw Screw2L936N4Button Spring1L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L896	Ext. Arm Screws	4
L907Handle2L908N2Jaw Block1L919Block Screw2L922N10Clamp Base1L923N9Clamp Jaw1L925NFramer Spacer1L933T4/B3Button1L935NJaw Screw2L936N4Button Spring1L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L902	Link Pin 1	1
L908N2Jaw Block1L919Block Screw2L922N10Clamp Base1L923N9Clamp Jaw1L925NFramer Spacer1L933T4/B3Button1L935NJaw Screw2L936N4Button Spring1L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L904N	Link Pin 2	2
L919Block Screw2L922N10Clamp Base1L923N9Clamp Jaw1L925NFramer Spacer1L935NJaw Screw2L936N4Button Spring1L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L907	Handle	2
L922N10Clamp Base1L923N9Clamp Jaw1L925NFramer Spacer1L933T4/B3Button1L935NJaw Screw2L936N4Button Spring1L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L908N2	Jaw Block	1
L923N9Clamp Jaw1L923N9Clamp Jaw1L925NFramer Spacer1L933T4/B3Button1L935NJaw Screw2L936N4Button Spring1L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L919	Block Screw	2
L925NFramer Spacer1L933T4/B3Button1L933T4/B3Button1L935NJaw Screw2L936N4Button Spring1L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L922N10	Clamp Base	1
L933T4/B3Button1L933T4/B3Button1L935NJaw Screw2L936N4Button Spring1L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L923N9	Clamp Jaw	1
L935NJaw Screw2L935N4Button Spring1L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L925N	Framer Spacer	1
L936N4Button Spring1L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L933T4/B3	Button	1
L939Bottom Post Screw3L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L935N	Jaw Screw	2
L1401Vise Stop1L1400Slider Guides2L1410Slider Guide Screws4	L936N4	Button Spring	1
L1400Slider Guides2L1410Slider Guide Screws4	L939	Bottom Post Screw	3
L1410 Slider Guide Screws 4	L1401	Vise Stop	1
	L1400	Slider Guides	2
L1455 Slider Stop Cam 1	L1410	Slider Guide Screws	4
	L1455	Slider Stop Cam	1

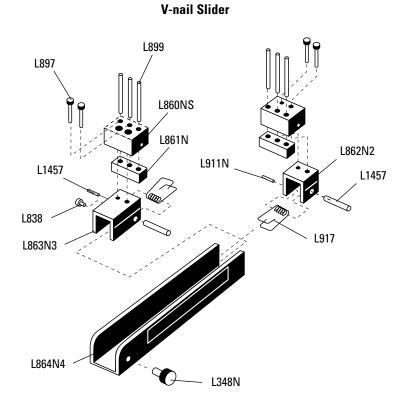

No.	Description	Qty.
L348N	Knob Screw	1
L838	Slide Block Tension Screw	1
L860N5	Pin Block	2
L861N	Pin Holder	2
L862N2	Slide Block Small	1
L863N3	Slide Block Large	1
L864N4	Slide Block Holder	1
L897	Pin Block Screw	4
L899	Nail Pins	6
L911N	Slide Block Spring Pin	2
L917	Slide Block Spring	2
L1457	Slide Block Spring Pin	2

Pressure Pad Assembly

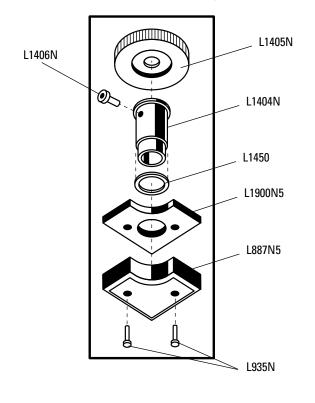

No.	Description	Qty.
L887N5	Pressure Pad	1
L900N5	Pressure Block	1
L935N	Pad Screws	2
L1404N	Shaft Spacer	1
L1405N	Adj. Nut	1
L1406N	Shaft Spacer Screw	1
L1450	Adj. Nut Retaining Ring	1



ALSO AVAILABLE FROM LOGAN GRAPHICS

Logan Graphics picture framing system includes all the tools and accessories you need to produce professional quality frames including...


PRECISION SANDER ELITE

Model F200-2

Sands miters to perfect 45° angle

for tight, square frames

- 10 lb wheel
- Adjusts 45° left, 90° and 45° right
- Micro adjustment for perfect 45°
- Aluminum oxide sand paper with life extending bar
- Sand up to 2 1/2" (64mm) mouldings
- Dust removal bar

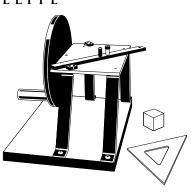



Controls 2000


REPLACEMENT V-NAILS Find replacement V-nails where you purchased your tool.

 1/4" (7mm), 3/8" (10mm) and 1/2 (12mm) sizes are available for both soft and hard wood applications, packaged in quantities of 200.

FITTING TOOL Model F400-1

Drives brads or point inserts into wood

- frames to hold materials in place
- Drives four different inserts
 No aligning or handing
- No slipping or bending
- Removes inserts
- Easy adjust foot
- Use on hard or soft woods
- Patented rotating insert holder
- Proper drive angle assured
- No guessing or skill required

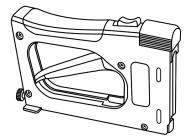

DUAL DRIVE ELITE Model F500-2

Spring-loaded action drives both rigid and flexible points to secure artwork in both hard and softwood frames

- Holds stacks of flexible or rigid points for fast productive framing
- Comfortable handle grip and smooth firing action
- Must-have for artists, framers and hobbyists!
- For best results, using only authentic Logan points

For more information, including where to buy Logan Framing Products, Please visit us at **www.logangraphic.com** or call Toll Free (800) 331 6232.

