

## INSTRUCTIONS ADJUSTABLE ANGLE CUTTER Model XTC6030

Adjustable deep bevel cutter to be used on suitable cosplay materials. Can cut materials up to 1/2" (13 mm) thick with adjustable angles from 20°, 30°, 45°, 60°, and 90° degrees. Features included adjustable blade depth, ergonomic handle with on-board blade storage. Use replacement blades WC-5 or WC-20.

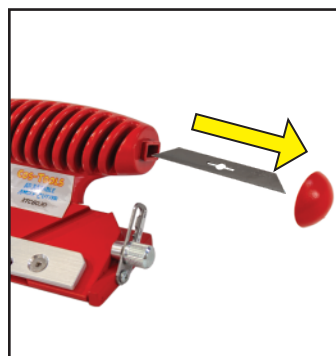


Fig 1

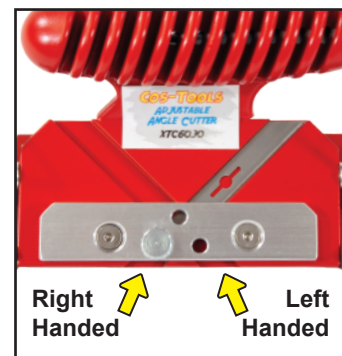


Fig 2

### BLADE INSTALLATION

- 1 Remove the Blade Storage cover located at the tip of the handle, and take out a new blade (**Fig. 1**).
- 2 Slide the blade down the Blade Channel and tighten the Blade Locking Screw to lock in place.

**NOTE:** Left blade channel for left handed use, and right blade channel for right handed use (**Fig. 2**).

### CUTTING

- 1 Adjust the blade angle by loosening both side Angle Locking Screws (**Fig. 3**). Pivot handle to desired angle. Push the Angle Plate into the notch and tighten both Angle Locking Screws.

- 2 Position Cutter over the edge of the material, and slide blade out until it cuts into the underlayment (**Fig. 4**).

- 3 Tighten Blade Locking Screw to lock it in place.

**NOTE:** Which blade knob hole you use depends on which angle you are using, and if using it with your left or right hand (**Fig. 5**).

- 4 While keeping a downward pressure, grip and pull Adjustable Angle Cutter through cosplay material (**Fig. 6**).

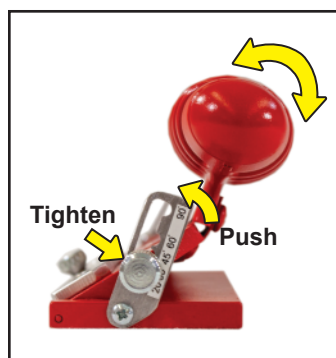


Fig 3



Fig 4

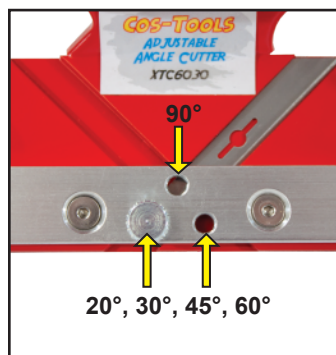


Fig 5



Fig 6

Use replacement blades XC-5 or XC-20



CAUTION: BLADES EXTREMELY SHARP

**NOTE:** Make sure to use foam board underlayment when cutting.