

Uses parallel blades with an adjustable width to cut strips of various cosplay materials. Can be adjusted to cut strips from 3/16" (5 mm) to 2 1/2" (64 mm) in width out of suitable cosplay material up to 1/2" (13 mm) thick. Features include adjustable blade depth, ergonomic handle with on-board blade storage. Use replacement blades WC-5 or WC-20.



Fig 1



Fig 2

BLADE INSTALLATION

- 1 Remove the Blade Storage cover located at the tip of the handle, and take out a new blade (**Fig. 1**).
- 2 Unscrew the Blade Locking Screw from the Sliding Nut.
- 3 Place the blade into the blade groove, making sure the hole in the blade lines up with the hole in the Sliding Nut. Replace and tighten Blade Locking Screw (**Fig. 2**).

USE EXTREME CAUTION DURING THIS STEP

CUTTING

- 1 Adjust the strip width by turning the Knob to the desired width. Use the Ruler Guide to determine the width (**Fig. 3**).
 - 2 Loosen the Blade Locking Screw, and adjust the depth of the blade. Tighten to lock depth (**Fig. 4**).
- NOTE:** We suggest putting the Strip Cutter at the edge of the material, and extending the blades past material into your underlayment for clean cuts.
- 3 Grip and pull through suitable cosplay materials. Can be used with a straight edge (**Fig. 5**) or freehanded (**Fig. 6**).

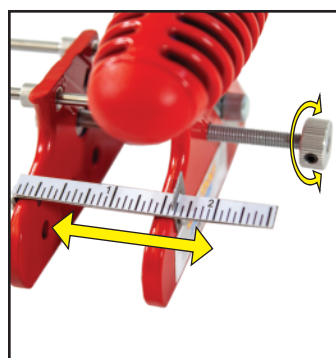


Fig 3



Fig 4



Fig 5



Fig 6

Use replacement blades XC-5 or XC-20



CAUTION: BLADES EXTREMELY SHARP

USE EXTREME CAUTION WHEN INSTALLING BLADES AND USING THIS TOOL. ALWAYS LOCK BLADES INTO THE SAFETY POSITION WHEN NOT IN USE.

NOTE: Make sure to use foam board underlayment when cutting.