


ELITE JOINER

MODEL F300-3

PARTS DIAGRAM

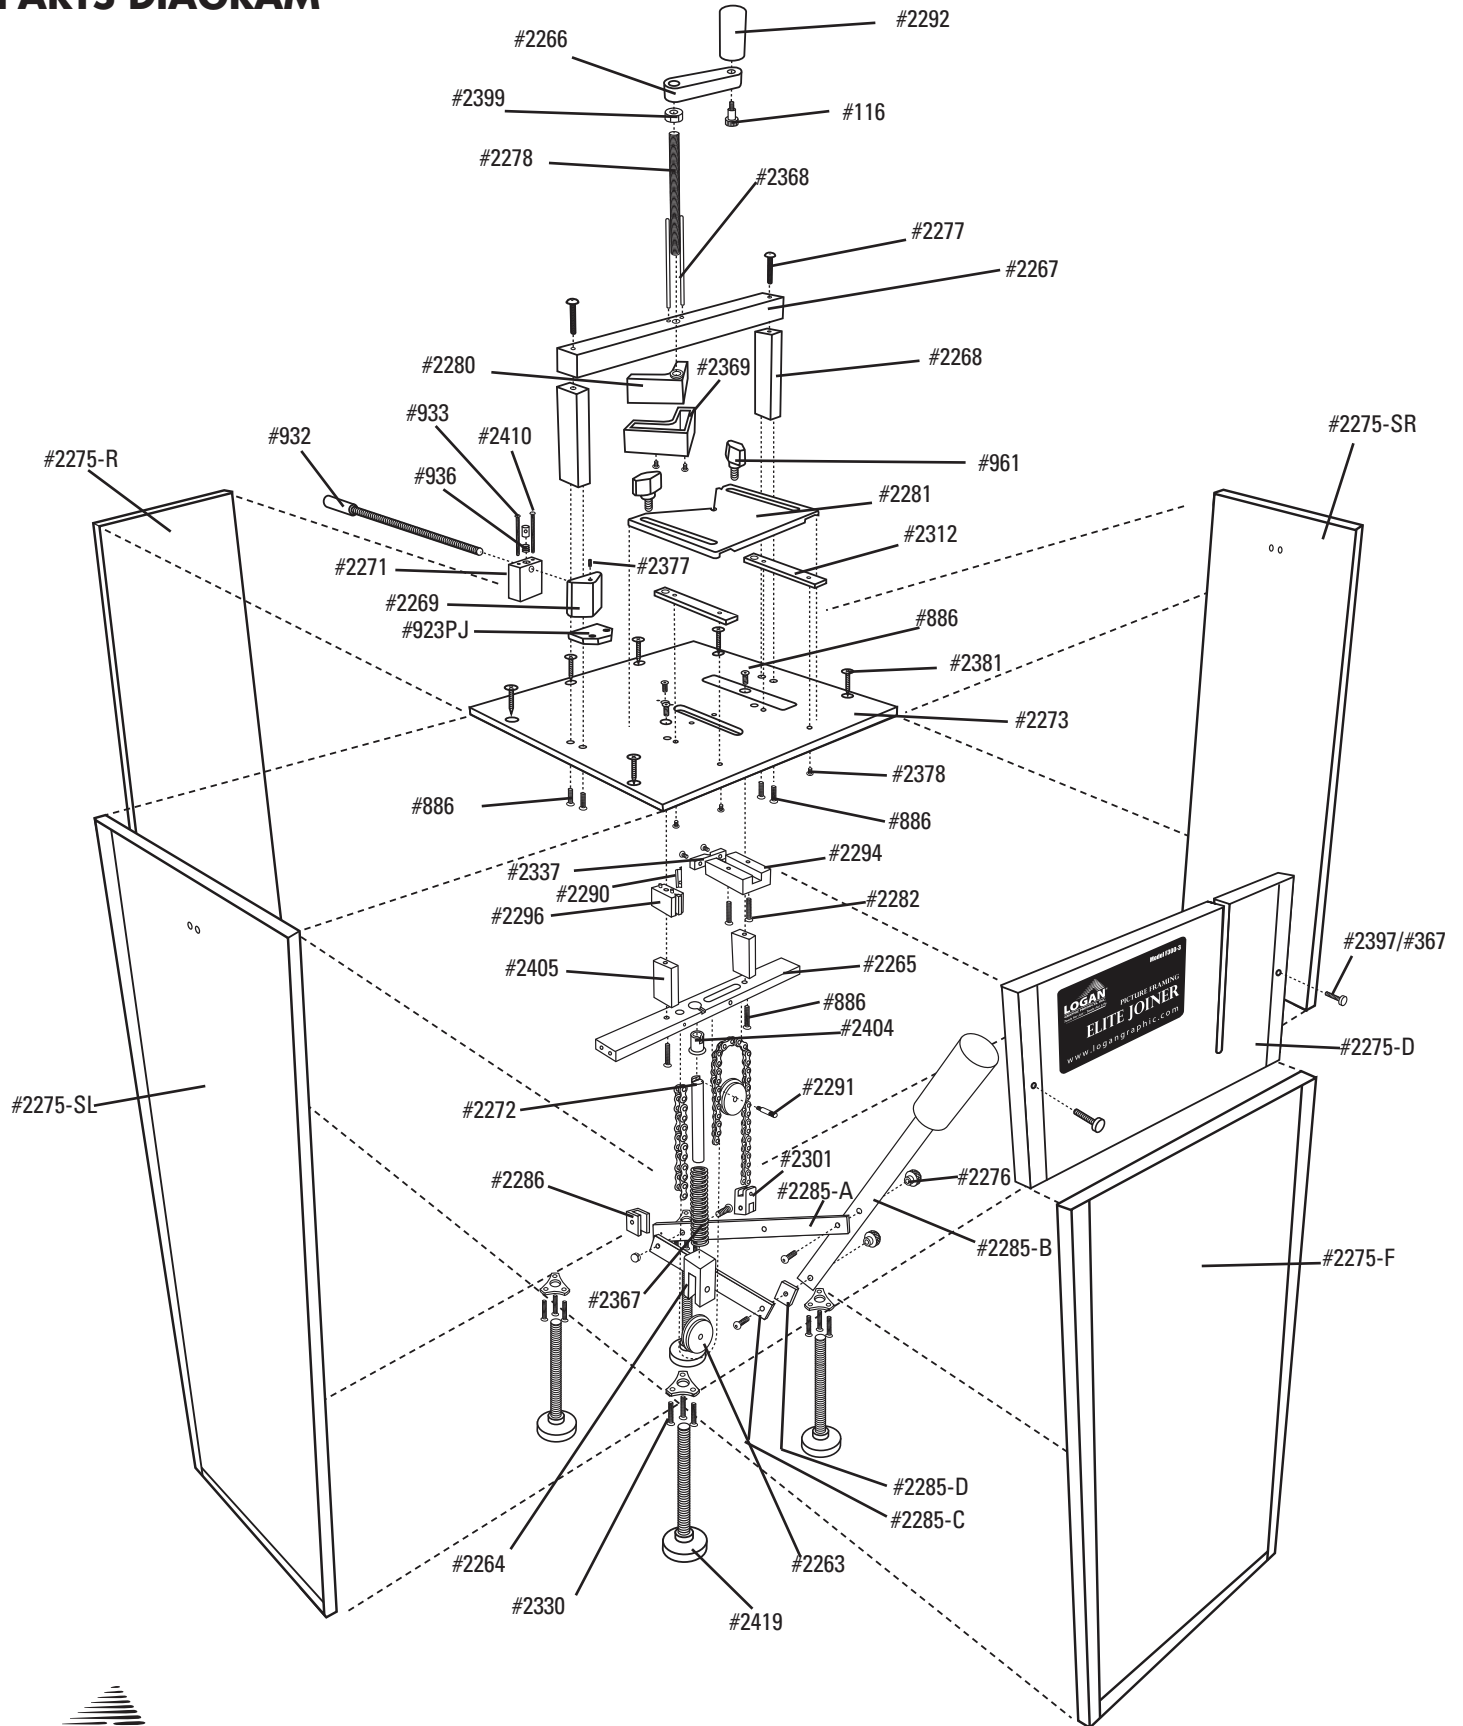

ELITE JOINER

MODEL F300-3

PARTS LIST

116	Shoulder Bolt	1	2282	Screw	2
886	Screw	6	2285A	Lever Arm	1
923PJ	Clamp Jaw	1	2285B	Lever Bar	1
932	Clamp Screw	1	2285C	Lever Link	1
933	Slide Button	1	2285D	Lever Link Spacer	1
936	Buttom Spring	1	2286	Handle Block	1
961	Fence Knob	2	2290	Vnail Driver	1
2263	Pulley	2	2291	Driver Pin	1
2264	Pulley Block	1	2292	Handle Knob	1
2265	Pulley Bar	1	2294	Nail Block	1
2266	Screw Handle	1	2296	Magnet Block	1
2267	Top Beam	1	2301	Chain Link	1
2268	Support Beam	2	2312	Vise Guide	2
2269	Top Clamp Jaw	1	2337	Driver Shim	1
2271	Button Block	1	2367	Return Spring	1
2272	Drive Rod	1	2368	Foot Retaining Pin	2
2273	Top Plate	1	2369	Rubber Foot Pad	1
2275-B	Base Bottom	1	2377	Clamp Rod Screw	1
2275-D	Door	1	2378	Slide Screw	4
2275-F	Base Front	1	2381	Top Base Screw	8
2275-R	Base Rear	1	2397/367	Door Screw	2
2275-SL	Base Side - Left	1	2399	Pressure Screw Lock Nut	1
2275-SR	Base Side - Right	1	2404	Rod Bushing	1
2276	Lever Knob	2	2405	Pulley Bar Post	2
2277	Top Beam Screw	2	2410	Button Block Screw	2
2280	Pressure Foot	1	2419	Adjustment Feet	4
2281	Vise Plate	1			

